


# NTE location guide


You need to show the Openreach engineer where to install the socket for your new service access line. The socket should be placed as close as possible and within 1.5m from the intended location of the One Net router.

The images below will help you find the most suitable place for the socket. Use the template on the next page to mark the location.

## Communications cabinet

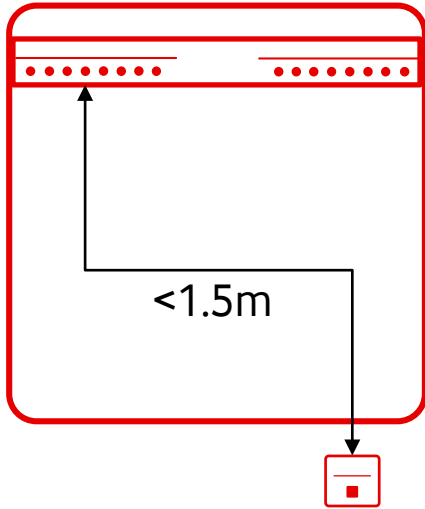

## Shelf or desk

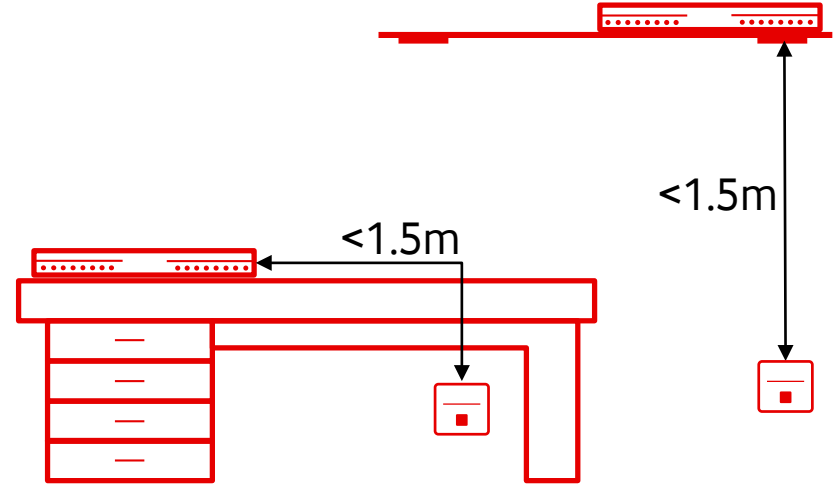

**INSTALL  
VODAFONE  
ONE NET  
NTE HERE**

